


Cje

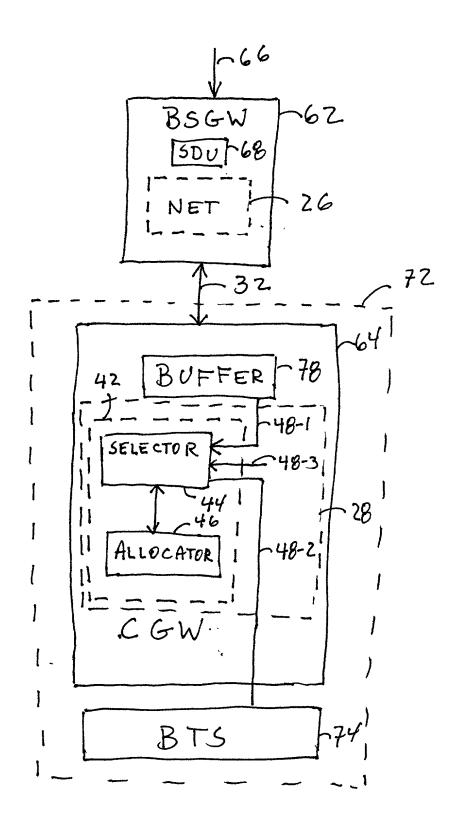

F16. Z

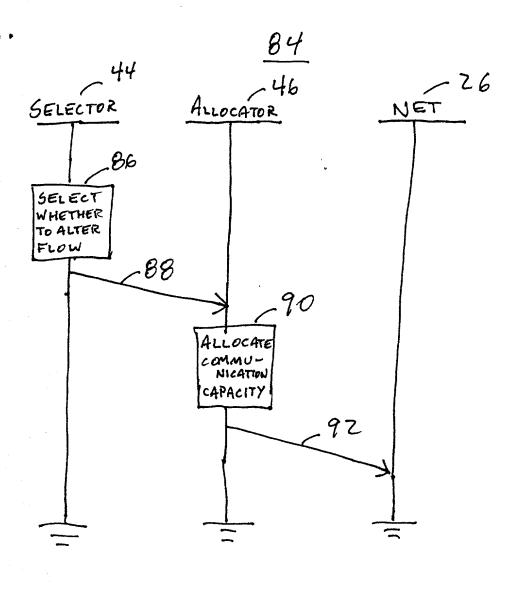


FIG. 3

96 98
MONITOR INDICATION OF PACKET DATA FLOW UPON AIR LINK.
100
SELECT WHETHER TO ALTER THE PACKET DATA FLOW ON THE COMMUNICATION LINK
102
SELECTABLY ALLOCATE, OR REALLOCATE, CAPACITY UPONTHE COMMUNICATION LINK

FIG. 4